













































ProSYS Plus

Quick User Guide

Full ("Away") Arming	
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> ➤ code or use Proximity tag
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <ul style="list-style-type: none">  to apply to all partitions, or slide a specific partition to the right under .
 <p>Full Arm all: Security ➤ </p>	 <p>Press </p>
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  ➤ code 	 <p>Press </p>
Partial ("Stay") Arming	
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> ➤ code or use Proximity tag
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <ul style="list-style-type: none">  to apply to all partitions, or slide a specific partition to the left under .
 <p>Partial Arm all: Security ➤ press </p>	 <p>Press </p>
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  ➤ code 	 <p>Press  or large rounded button (installer-defined)</p>

For more information about RISCO Group's branches, distributors and full product line, please visit riscogroup.com



Partition & Group Arming

❖ Full partition arming:

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



❖ Partial partition arming:

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



Group Arming: "Groups" tab > press group letter

❖ Full partition arming:

Code >  > select **All** or specific partition number/s > 





❖ Partial partition arming:

Code >  > select **All** or specific partition number/s > 

Group Arming: Press group letter



Note: Supports up to 3 partitions. Does not support Group arming.

❖ Full partition arming:


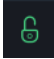



























- **Quick mode:** Partition number > 
- **High Security mode:** Partition number >  > code or use Proximity tag



❖ Partial partition arming:

- **Quick mode:** Partition number > 
- **High Security mode:** Partition number >  > code or use Proximity tag



System Disarming	
 Code ➤ “Security” menu ➤ 	  ➤ code or use Proximity tag
 Code ➤ 	  to disarm all partitions, or slide a specific partition to the center under  ➤ enter code
 Disarm all: Security ➤  ➤ code ➤ press Disarm	 Press 
 ❖ Quick mode:  ❖ High security mode:  ➤ code	 Disarm all: Press 
Partition & Group Disarming	
 Code ➤ “Security” menu ➤ “Partitions” tab ➤ select the Partitions to Disarm ➤ 	
 Partition disarming: Code ➤  ➤ select All or specific partition number(s) Group disarming: 	 Partition disarming: Partition number ➤  ➤ code
Duress Disarming	
 Duress code ➤  Note: Panel is silent (no alarm siren)	  ➤ duress code Note: Panel is silent (no alarm siren)



Bypassing & Un-bypassing Zones




Code ➤ “Security” menu ➤ “Detectors” tab ➤ select a detector (zone) ➤ slide switch to the right to bypass



⏮ ➤ code, ✓ ➤ scroll to Activities menu, ✓ ➤ Bypass, ✓ ➤ Zones, ✓ ➤ scroll to select a bypass option, ✓ .

Viewing System Troubles



Code ➤ from the Top Bar, press  to view troubles



⏮ ➤ code, ✓ ➤ scroll to View menu, ✓ ➤ Trouble, ✓ ➤ scroll to view troubles

Viewing Last Alarm / Event Log



Code ➤ “History” menu ➤ press “All” to view all events, or search an event

Note: You can filter the search according to specific types of events:
All / Alarms / Troubles / Smart Home / Media Events




⏮ ➤ code, ✓ ➤ scroll to Event Log, ✓ ➤ scroll to view events


Viewing System Status



i for 2 seconds

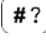


❖ **Quick mode:**  for 2 seconds

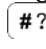
❖ **High Security mode:**
 for 2 seconds ➤
code or use
Proximity tag



Press *

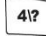

❖ **Quick mode:**  for 2 seconds

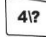❖ **High Security mode:**  for 2 seconds ➤ code



Activating Output



Code ➤
"Security" menu
➤
"Utility Output"
tab ➤ select
relevant Utility
Output button,
✓



➤ code, ✓
➤ scroll to
Activities menu,
✓ ➤ enter
Utility Output
number, ✓.
Note: Must be
installer-defined



❖ **Quick mode:** Press
button (1–3) for 2
seconds
❖ **High security
mode:** Press button
(1–3) for 2 seconds
➤ code or use
Proximity tag.
Note: Must be
installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds
❖ **High security mode:** Press button (1–3) for 2 seconds ➤ enter code.
Note: Must be installer-defined





Activating a Panic Alarm





Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press  and  together for at least 2 seconds.

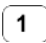

Press  and  together for 2 seconds



Press  and  simultaneously



Press  and  together for 2 seconds.

Activating a Fire Alarm





Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press  and  together for at least 2 seconds.



Press  +  together for 2 seconds

Activating an Auxiliary Emergency Alarm





Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press  and  together for at least 2 seconds.



Press  +  together for 2 seconds









SMS Commands

NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

Full Arm: code + A (Example: 1234A)	Get system status: code + ST
Home Arm: code + H	Bypass Zone: code + B + zone number
Group Arm: code + G + select group A--D	Un-bypass Zone: code + UB + zone number
Full Disarm: code + D	View last alarm : code + AL
Partition Full Arm: code + A: + partition number	Change FM number: code + FMPHONE + FM serial number + NEW + new phone number
Partition Home Arm: code + H: + partition number	Activate Output: code + UOON + UO number
Multiple Partition Full/Home Arm: code + A/ H: + partition number A, + partition number B, + partition number C, etc.	Deactivate Output: code + UOOFF + UO number
Partition Disarm: code + D: + partition number	Get SIM credit level: code + CR
Multiple Partition Disarm: code + D: + partition number A, + partition number B, + partition number C, etc.	Get SIM credit level: code + CR

LED Indicators – Elegant Keypad

 Power LED On: Power OK. Off: No power Rapid flash: System trouble. Slow flash: System is programming	 Ready LED On: Ready to arm Off: Not ready to arm Slow flash: Ready to arm while entry/exit zone is open	 Arm LED On: System in fully armed mode Off: System disarmed Rapid flash: Alarm Slow flash: System in Exit Delay
 Partial Arm / Bypass LED On: System in partially-armed or zone-bypassed mode Off: No bypassed zones	 Tamper LED On: Tamper alarm Off: No tamper alarm	 Fire LED: On: Fire alarm Off: No fire alarm Flash: Fire circuit trouble



LED Indicators – 2-Way Remote Control

Operation	Send command*	Receive Status
Full Arm	Green	Red
Partial Arm	Green	Orange
Disarm	Green	Green
Alarm	Green	Flashing LED

* If the LED changes to orange, it indicates a low battery condition.

Defining User Codes – Elegant Keypad

1. ➤ Grand master **code** (default = 1234) ✓
2. ➤ to scroll to **Codes/Tags** ➤ press ✓ twice.
3. ➤ to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code, ✓ ; the system beeps and **ACCEPTED** displays

Registering to the RISCO Cloud

- 1 After the RISCO Cloud has been enabled by your system installer, go to **www.riscocloud.com**
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the ProSYS Plus User Manual).
- 6 Complete registration form, and then press **Register**.
- 7 Open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to **www.riscocloud.com**
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Enter the **system PIN code** (user code).
- 4 Click **Enter**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

For additional information see the ProSYS Plus User Manual, available on our website: **www.riscogroup.com**

© RISCO Group 2020. All rights reserved.